



# RETUNING OF STRONG SATELLITE RECEIVERS

## RETUNING YOUR STRONG RECEIVER – SRT 4654X

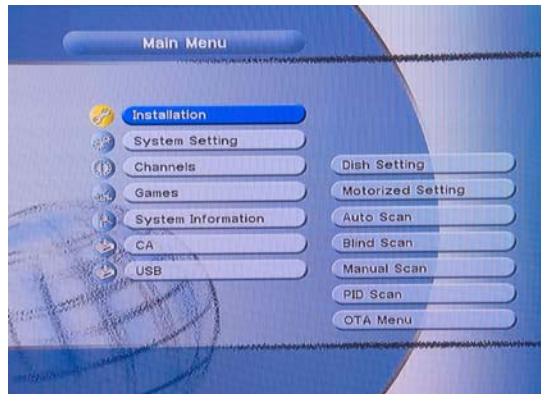


### STEP 1

Using the Strong Remote press “Menu” button. When the above screen appears ensure that “Installation” is highlighted and then press “OK”.

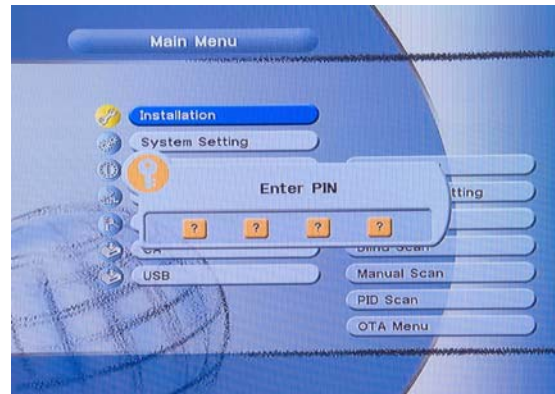


### STEP 2

Enter your PIN number and press “OK”. The factory set default is “0000”.

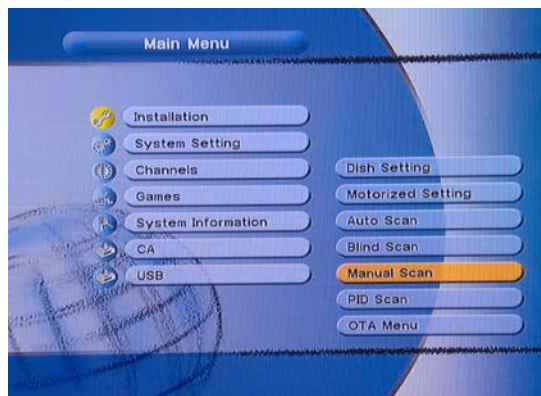


### STEP 3

Using the right arrow and the down arrow, move the highlight to “Manual Scan”. Press “OK”.

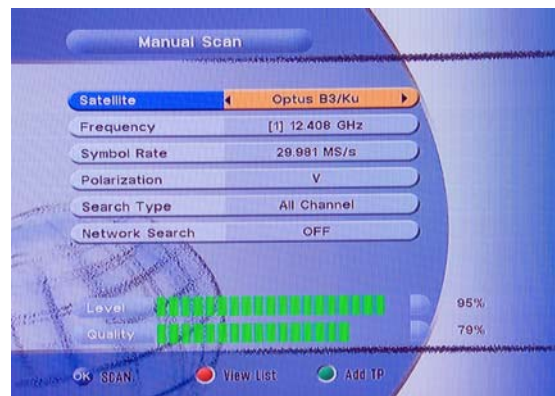


### STEP 4

Select the “Optus B3/Ku” satellite by pressing either the right or the left arrow.

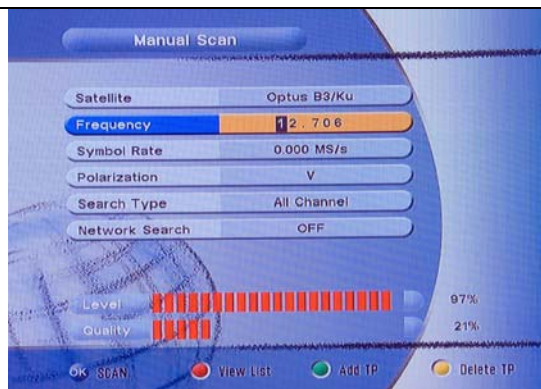


### STEP 4

Press the green button on the remote control to enter a new TP. The “Frequency” area will be highlighted. Using the numbers on the remote control, press “1 2 7 0 6”

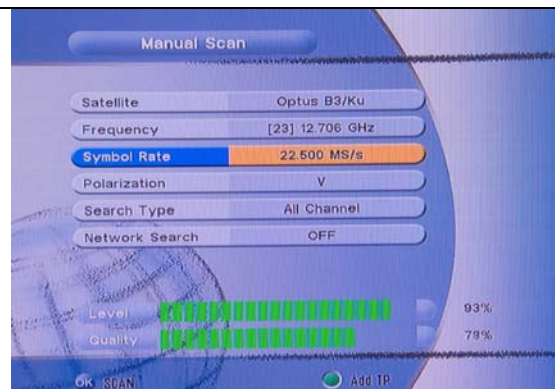

### STEP 5

Press the down arrow on the remote control to highlight the “Symbol Rate” area. Using the numbers on the remote control, press “2 2 5 0 0”

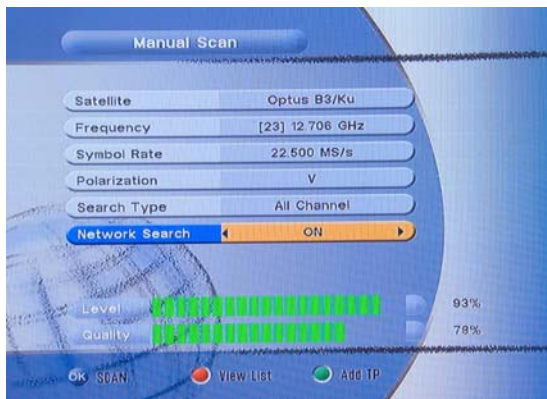


**STEP 6**

Press the down arrow on the remote control to highlight the “Polarization” area.


Using the right or left arrow to select “V” for vertical polarization.

Press the down arrow twice to move the highlighted area to “Network Search” and then use the right or left arrow to select “ON”.

Press “OK” to scan the TP.

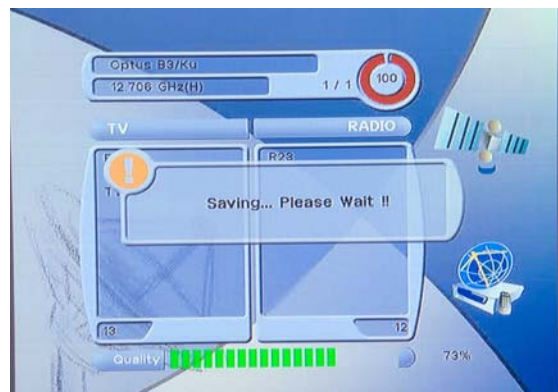

After scanning this screen will show briefly and then will be replaced by the following screen.

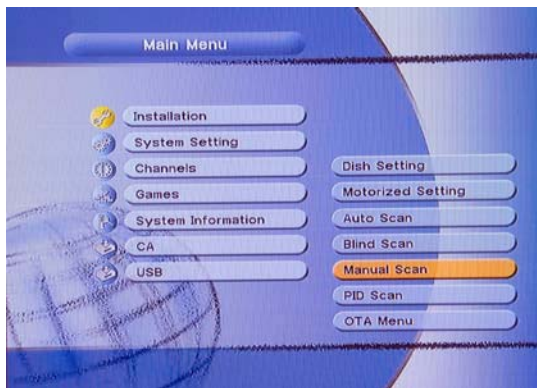

**STEP 7**

Press “Exit” until the menu system is exited.